



Installation of Portable Tower

Can be used for beam or Inverted V G5RV or both



Install Rotor and assemble Beam



Position tower, ensure Rotor is pointed north.



Lift & install beam, rope, & pulley



Install Coax & rotor control cables





Camo Pole/golf bank mast setup



NIVS STAND ALONE ATENNA



WINLINK KIT PUSH UP MAST & TRIPOD



WEATHER STATION MAST, SECURE CLAMP