





**ENSURE SUPPORT TRAILER IS ORIENTED NORTH** 

## MAKE SURE IS ORIENTED NORTH LEVEL AND ALL OUT RIGGERS OUT AND SECURE


















EXTEND MAST AND SECURE & INSTALL ROTOR, ORIENT IT NORTH, INSTALL ROPE ON YARD ARM FOR G5RV




**ASSEMBLE BEAM** 



EXTEND MAST AND SECURE & INSTALL ROTOR, ORIENT IT NORTH, INSTALL ROPE ON YARD ARM FOR G5RV
INSTALL TNT MAST SAFETY BOLT DEVICE

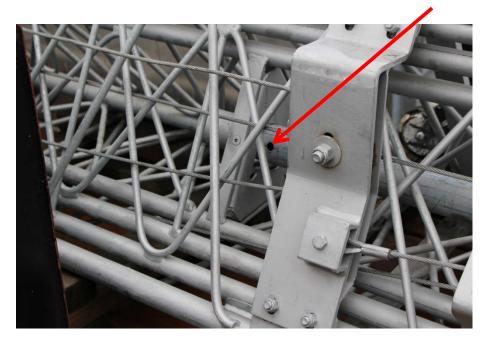

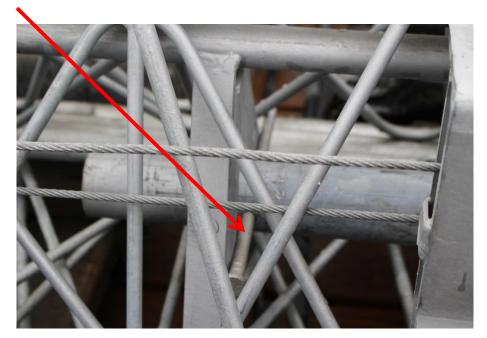





RAISE BEAM WITH DIRECTOR DOWN WITH BACK OF TRAILER ORIENTED NORTH

## PLACE SPACER NUTS ON ROTOR CLAMP

## MAKE SURE THE CABLE LOOP IS CORRECT AND SECURE TO TOWER









MAKE SURE SAFETY PINS ARE SECURED ON BASE OF TOWER

## LAY OUT POWER CABLE INSERT SPIDER BOX AS NEEDED







PLACE SAFETY CONES OR ENG TAPE AS NEEDED





MAKE SURE FILTER SHUT OFF IS ON, BREAKERS ARE OFF AND POWER CABLE CONNECTED

Do not start generator until tower and Cables are all installed, secured and layed out, for noise discipline.

Make sure Comm Center gives the ok To start the generator

