



Deploy Awning & tables as needed



Unlock rear door ramp & install rear jacks





AC inverter and fuse



Install Coax & Rotor control cables on thru/jacks



Before Setup and what we should have after tear down, securing all lights and AC power

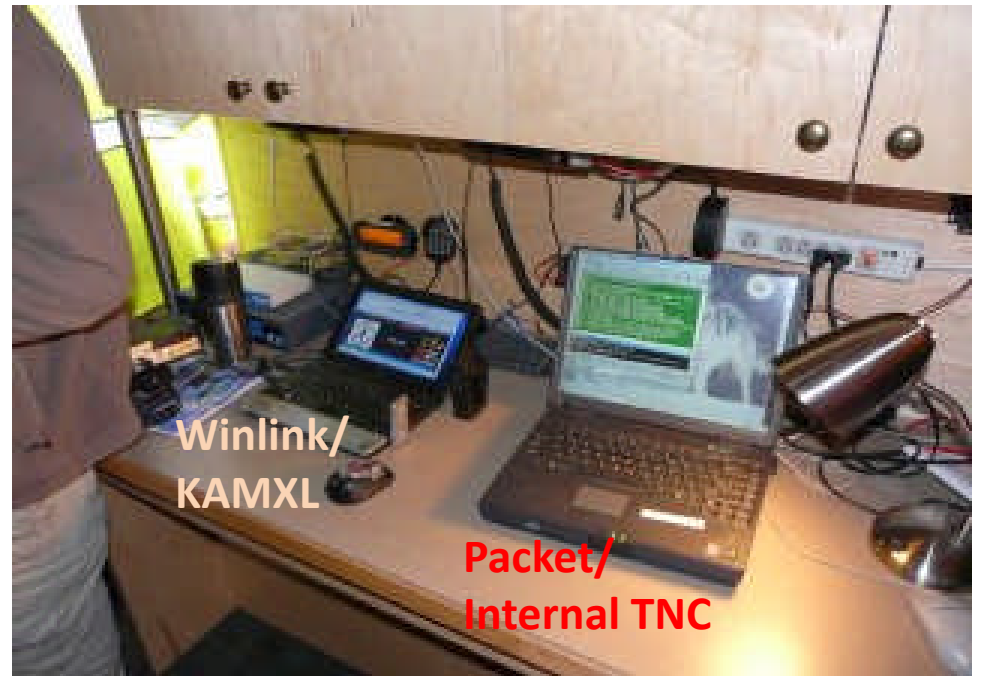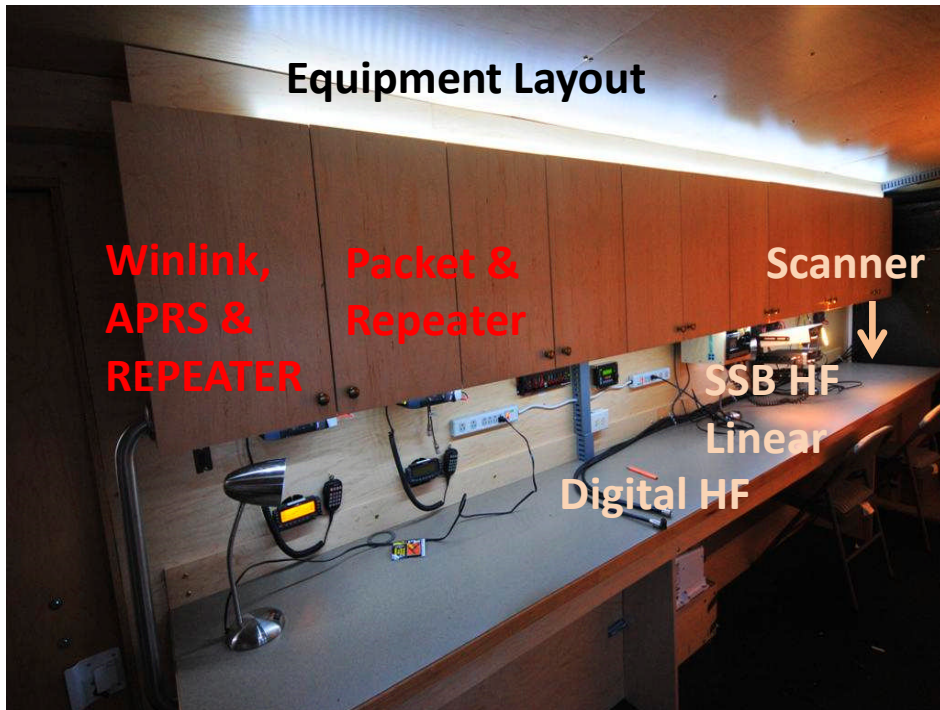

Digital Ops & Winlink Kenwood TS480



Using Dragon 4 & Tigertronics TNCs
Tuner is MFJ 993B